



- 1. H.V. Phase Plug-in bushing
- 2. H.V. neutral Plug-in bushing
- 3. Tap changer on Reactor
- 4. Earthing terminal
- 5. Oil drain valve
- 6. Lifting lugs
- 7. Oil level indicator
- 8. Diagram plate
- 9. Rated plate
- 10. Neutral to earthing connector

kVA	A	B	C	k	n	Mass(kg)		SUBcomp 20.5kV 25–50A
						Oil	Total	
–	970	960	1150	260	108	380	1550	